



Wexford CT-166TF Plastic Casing Replacement

A quick and easy guide to replacing the outer plastic covers.

Written By: Cameron Mattson



INTRODUCTION

This guide will show you how to remove the plastic casing so that it can be replaced.



TOOLS:

- [Spudger](#) (1)
 - [Size 1 and 2 PH screw driver](#) (1)
-

Step 1 — Settings Knob



- Locate the knob at the top of the fan.

Step 2



 
- Remove the knob by gripping it and pulling straight up. Use a spudger if it is difficult to grip.
- ★ When reassembling, be sure to align the bottom of the new knob and the turning mechanism in the fan before pushing down.

Step 3 — Plastic Casing





- Using the plastic opening tool, turn the device over and remove the black plastic covers over the four screw holes.

Step 4

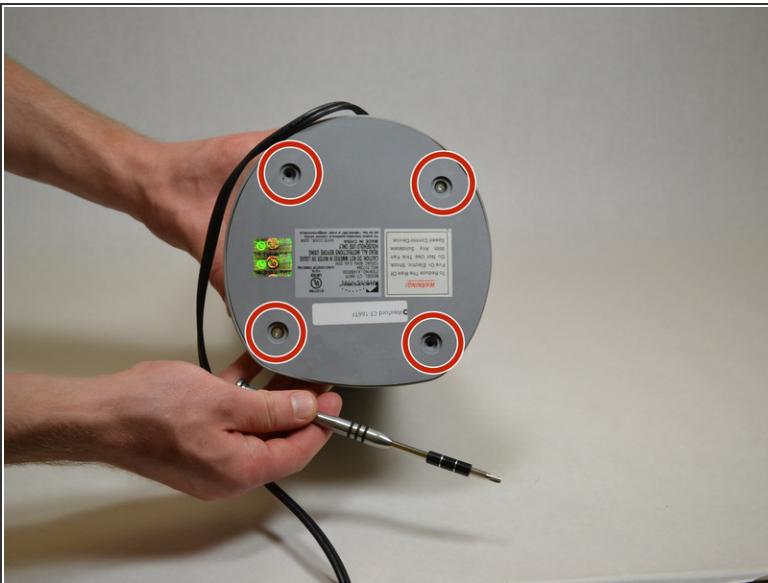

- Remove the four screws underneath the plastic covers.

  Step 5

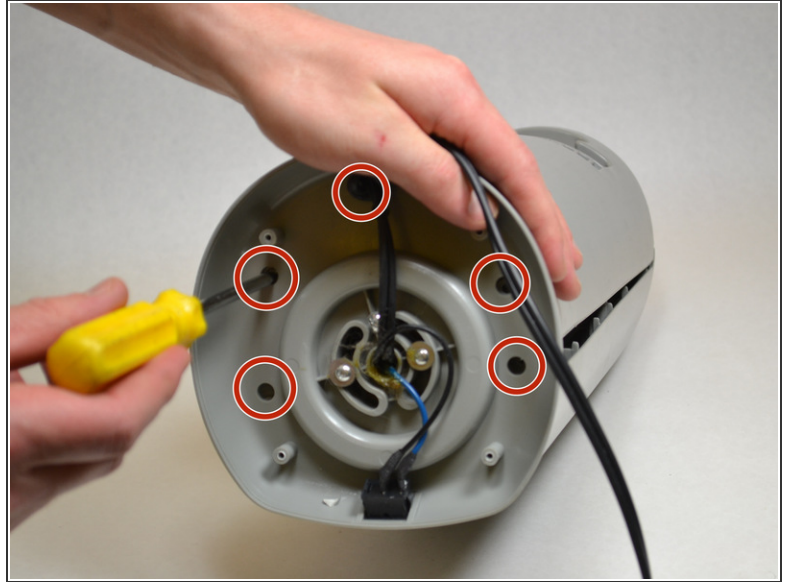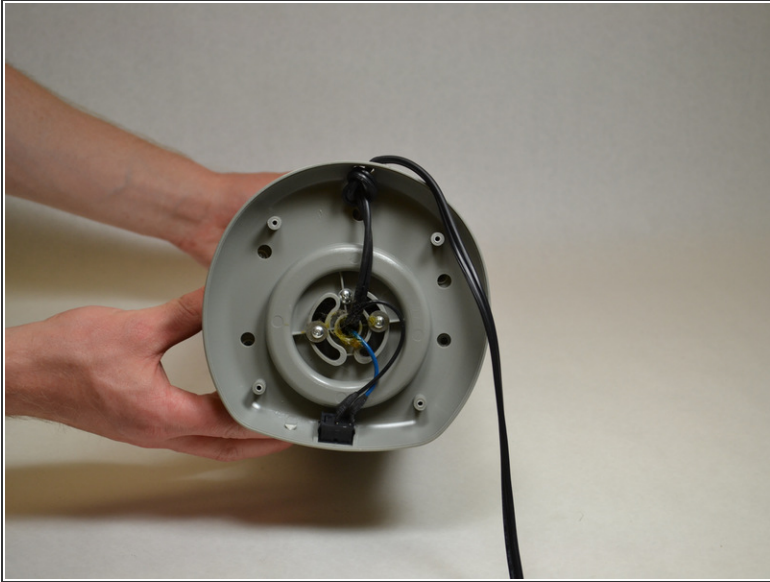

- Remove 5 smaller screws visible through small holes between the base and the casing.

Step 6



 
- Remove four screws on the back, two near the top and two near the bottom.

Step 7




- Pull off the back casing.

Step 8

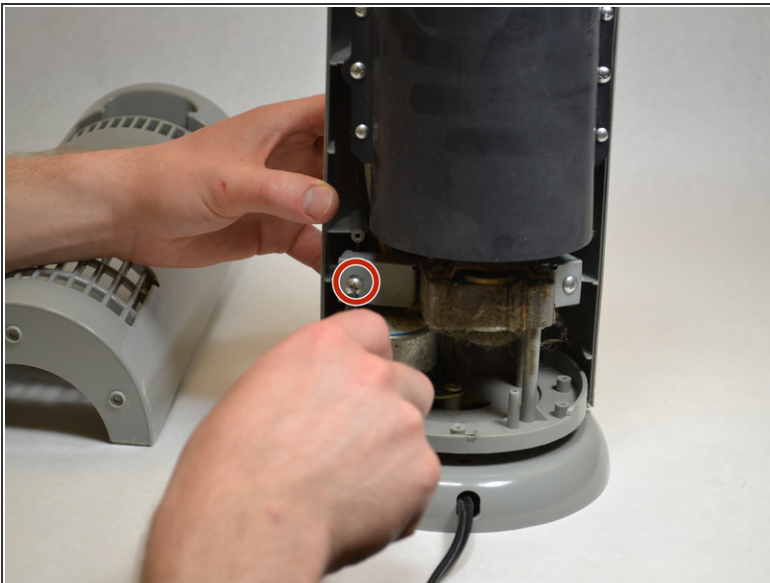

- Remove the 2 screws that attach the front part of the casing to the motor.

 Step 9

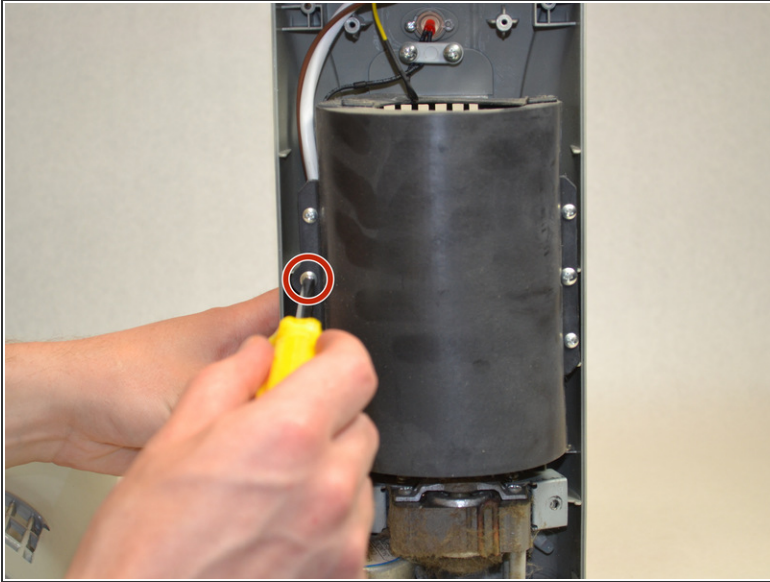

- Remove the two middle screws attaching the black plastic cover to the front .

Step 10



- Remove the two screws attached to the white bar near the red light on the top of the front casing.

Step 11



- Remove the two screws keeping the button attached to the top of the casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 12:03:18 AM.